

## How to measure, adjust the hames and fitting the hame hooks with spacer

To adjust the size of the hames is by moving the clip up and down the top position makes the hames the largest size, the middle position reduces the hames by one inch in size and on the bottom link they are the smallest so if 28" hames they can go to 27" and 26" to adjust to the collar size. Put the spacer in under the hame hook to make the hook in the right position.



To measure the hames size.

Measure between the top clip position to the bottom clip position in a straight line from top to bottom in inches

Do follow the shape of the hames

